

AP18.00-P-0101-06EG	Replace oil filter element, drain oil filter		
---------------------	--	--	--

Nm Crankcase ventilation, cylinder head cover


Number	Designation		Engine 611.960/ 961/962	Engine 612.961/ 962/967	Engine 612.963	Engine 612.965/ 966	Engine 613.960/ 961
BA01.20-P-1002-01A	Screw of trim panel of cylinder head cover to cylinder head cover	Nm	10	10	10	10	10
BA01.20-P-1003-01A	Screw attaching cover panel to charge air distribution pipe	Nm	10	10	10	10	10

Nm Crankcase ventilation, cylinder head cover

Number	Designation		Engine 646.951/961, 647	Engine 646.962/963	Engine 648
BA01.20-P-1002-01G	Bolt, trim panel of cylinder head cover to cylinder head	Nm	9	9	9
BA01.20-P-1003-01G	Bolt, cover to charge air distribution pipe.	Nm	9	9	9


 
 
 
Nm Engine lubrication, oil filter


Number	Designation		Engine 611.960/ 961/962	Engine 612.961/962/ 963/990, 613.960/961	Engine 612.965/ 966	Engine 646.951/961/ 962/963/982/ 983/984, 647, 648
BA18.20-P-1002-01G	Screw cap at oil filter	Nm	25	25	25	25

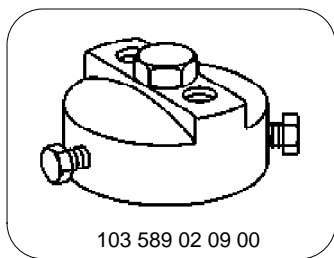

103 589 02 09 00

Socket wrench bit

- 1 Engine 611.961 as of 07.99, 611.962, 612, 613, 646, 647, 648:
Remove trim panel of cylinder head cover and trim panel of charge air distribution pipe.
- 2 Model 203, 211:
Remove fastening clamp (arrow) of fuel line.
- 3 Remove screw cap (1) with wrench socket  and take off together with oil filter element (3).
- 4 Replace seal (2).
- 5 Insert new oil filter element (3) into oil filter housing.
- 6 Fasten the screw cap (1) with bolts using a socket wrench bit  .
- 7 Model 203, 211:
Install the fastening clamp (arrow) of the fuel line.
- 8 Engine 611.961 as of 07.99, 611.962, 612, 613, 646, 647, 648:
Install the cylinder head cover trim panel and the charge air distribution pipe trim panel .

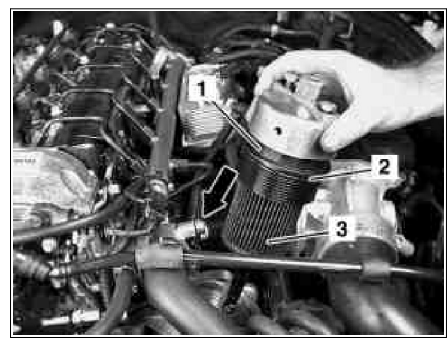

P18.20-2022-01