


**Nm** Crankcase ventilation, cylinder head cover

Number	Designation	Engine
		<b>613.960/ 961</b>
BA01.20-P-1002-01A	Screw of trim panel of cylinder head cover to cylinder head cover	Nm 10
BA01.20-P-1003-01A	Screw attaching cover panel to charge air distribution pipe	Nm 10

**Nm** Crankcase ventilation, cylinder head cover

Number	Designation	Engine
		<b>648</b>
BA01.20-P-1002-01G	Bolt, trim panel of cylinder head cover to cylinder head	Nm 9
BA01.20-P-1003-01G	Bolt, cover charge air distribution pipe	Nm 9

- 1 Unscrew bolts (3, 4).  
**i** **Installation:** Pay attention to tightening torques **Nm**.
- 2 Pull out trim panel (2) of charge air distribution pipe to the side.  
**i** **Installation:** Insert plates of trim panel (2) into the rubber mounts (5).
- 3 Take off trim panel (1) of cylinder head cover.  
**i** **Installation:** Ensure the trim panel is correctly installed; ensure no lines are trapped.
- 4 Install in the reverse order.

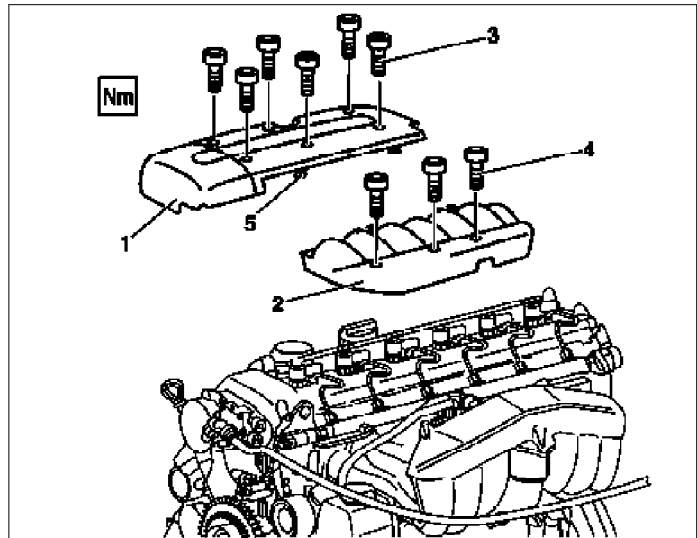

P01.20-2017-11