


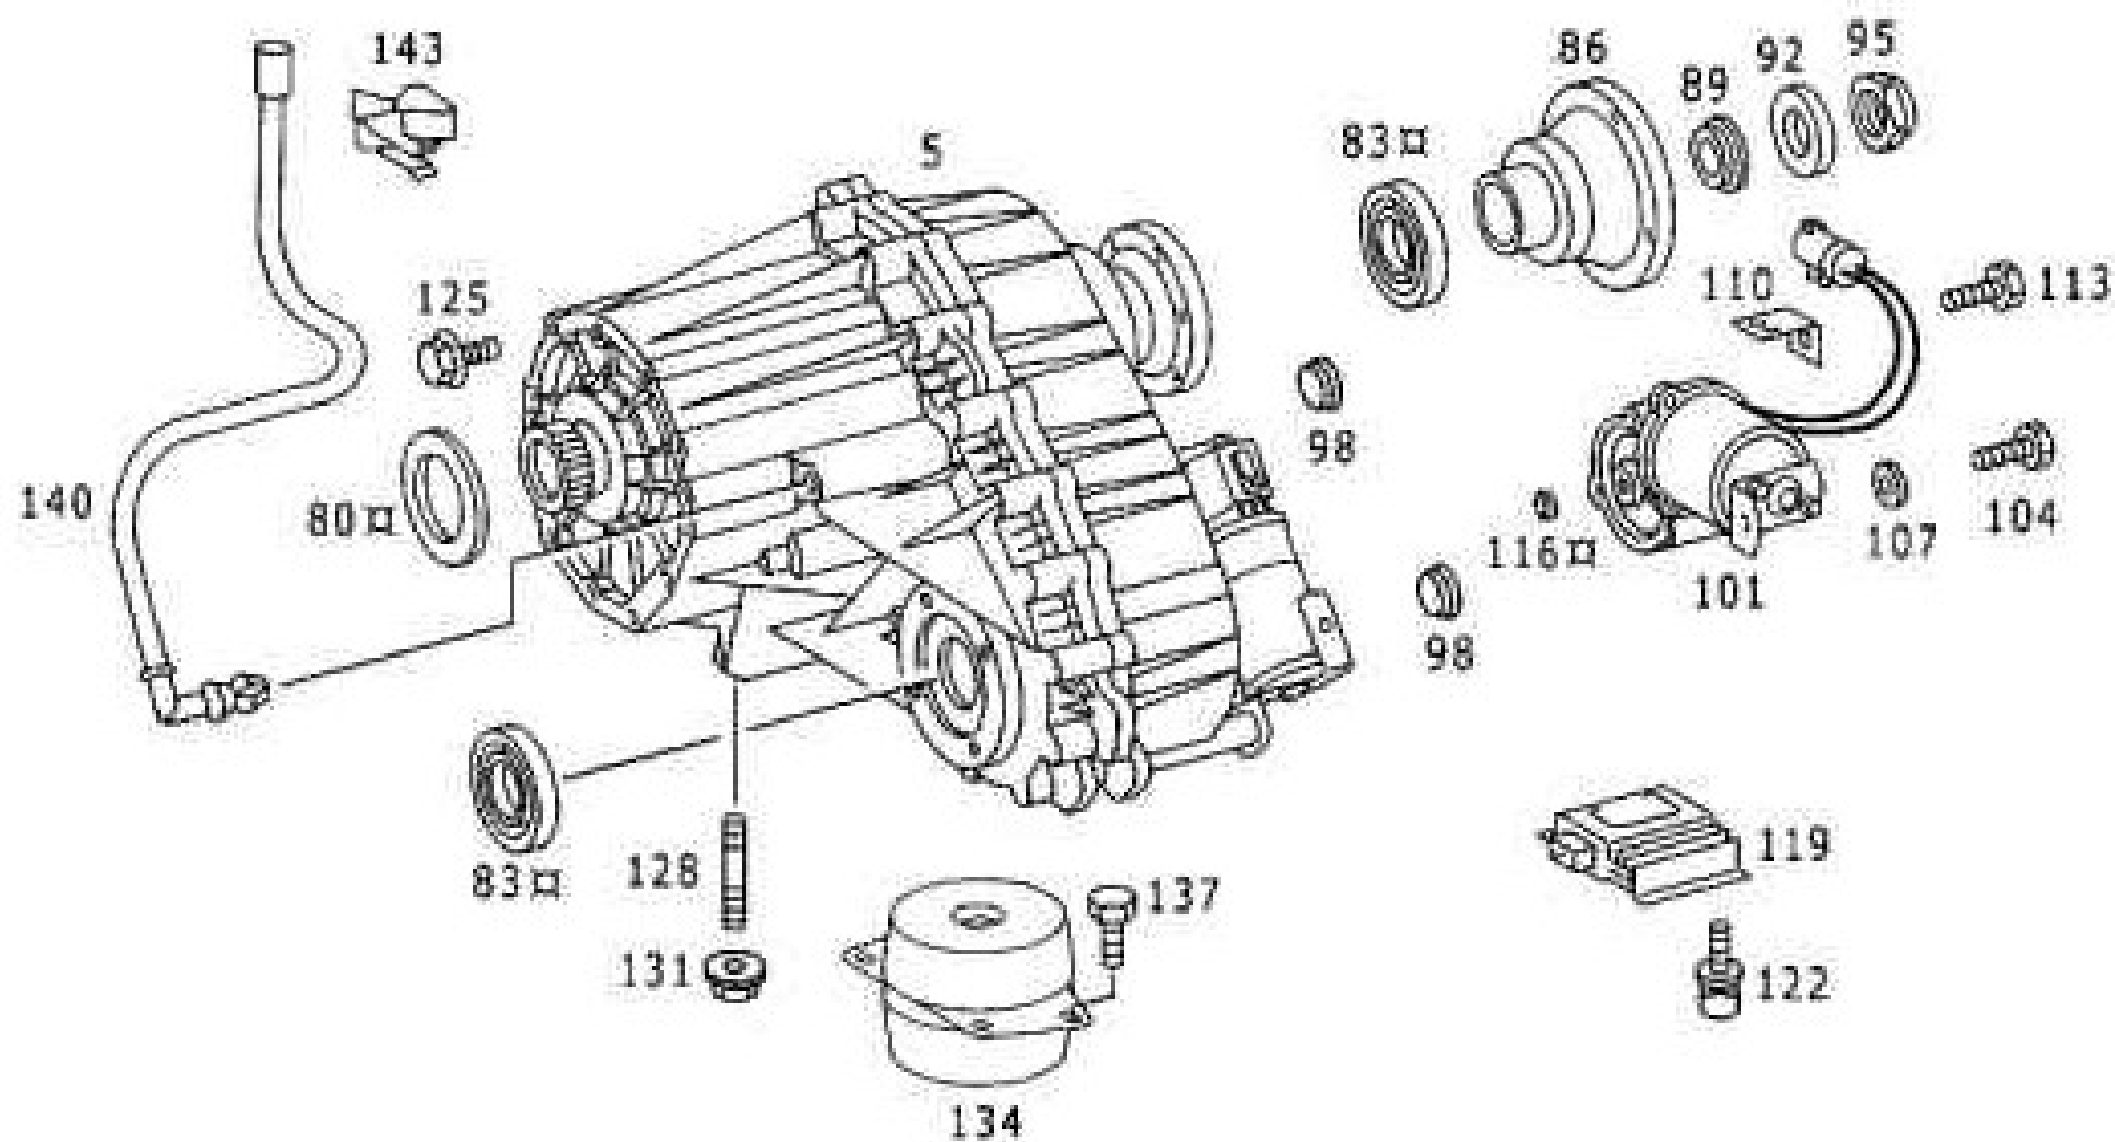

005	A	163 280 03 00	TRANSFER CASE REPLACED BY: A 163 280 04 00	-
005	A	163 280 04 00	TRANSFER CASE REPLACED BY: A 163 280 05 00	-
005	A	163 280 05 00	TRANSFER CASE	001
080	A	163 284 03 60	.SEAL RING	001
083	A	163 284 00 60	.SEAL RING	002
086	A	163 283 00 45	.COUPLING FLANGE	001
089	A	163 284 01 60	.SEAL RING	001
092	A	163 282 00 62	.THRUST WASHER	001
095	A	163 283 00 72	.NUT	001
098	A	163 281 00 86	.PLUG	002
101	A	163 540 00 88	.ELECTRIC MOTOR REPLACED BY: A 163 540 04 88	-
101	A	163 540 04 88	.ELECTRIC MOTOR REPLACED BY: A 163 540 05 88	-
101	A	163 540 05 88	.ELECTRIC MOTOR REPLACED BY: A 163 540 06 88	-
101	A	163 540 06 88	.ELECTRIC MOTOR REPLACED BY: A 163 540 08 88	-

104	N	304017 006016	.SCREW		001
107	N	006902 006102	.WASHER REPLACED BY: N 000988 008024		-
107	N	000988 008024	.FITTED WASHER		001
110	A	163 281 00 40	.BRACKET		001
113	N	304017 006026	.SCREW		003
116	A	163 284 02 60	.SEAL RING		001
119	A	163 545 01 32	CONTROL UNIT REPLACED BY: A 163 545 50 32	414	-
119	A	163 545 50 32	CONTROL UNIT REPLACED BY: A 163 545 79 32		-
119	A	163 545 79 32	CONTROL UNIT		001
122	N	914021 006014	COMBINATION BOLT M6X16		003
125	A	163 990 01 04	SCREW TRANSFER CASE TO TRANSMISSION		011
128	A	163 990 00 05	STUD TRANSFER CASE ON ENGINE MOUNT, REAR		002
131	A	163 990 00 50	NUT TRANSFER CASE ON ENGINE MOUNT, REAR		002
134	A	163 280 01 67	VIBRATION ABSORBER	I	001

VIBRATION ABSORBER

CODE: 423

SCREW

VIBRATION ABSORBER, M 8X20

UNIT BREATHING

=====

BREATHER

LOCK