

MODEL 129, 140 as of 1.6.96

The trip computer receives the following information via the trip computer interface (2 lines):

- D Driving speed
 - D Mileage
 - D Time
-



The trip computer receives information about fuel consumption directly from the fuel level sensor.

| | |