


MODEL 163.113

- 1 Noise encapsulation, front section
 2 Insulation cubes
 3 Scribe line, horizontal
 4 Scribe line, vertical
 5 Area to be removed

r 10 mm

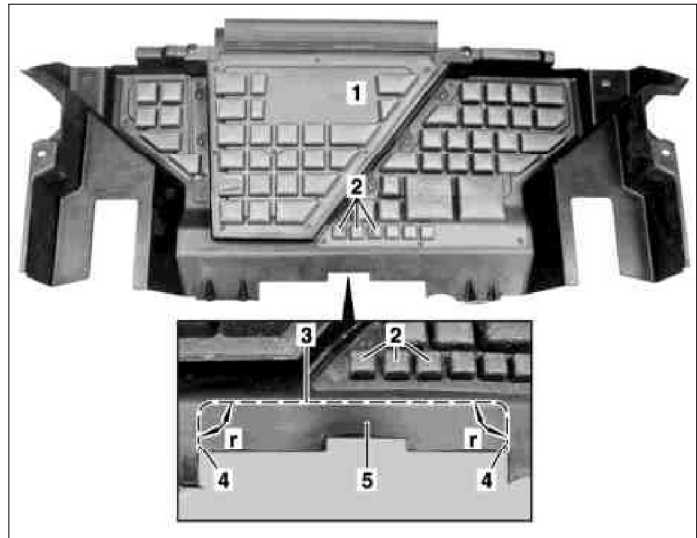

P94.30-2012-11

☒	Remove		
1	Remove noise encapsulation front section (1)	i Do NOT remove other encapsulation sections.	AR94.30-P-5400GH
	Modify		
2	Flatten insulation cubes (2)		
3	Scribe two 38 mm vertical lines (4) forward from rear edge of encapsulation	i Vertical scribe lines should be flush with outside edges of rear cutout in encapsulation.	
4	Scribe a straight, horizontal line (3) between vertical lines		
5	Radius forward corners of scribe lines to 10 mm (r)		
6	Remove area (5) of encapsulation bordered by scribe lines		
☒	Install		
7	Reinstall noise encapsulation front section (1)		AR94.30-P-5400GH