AR40.15-P-0080A	Remove/install wheel sensor	1.4.99
-----------------	-----------------------------	--------

MODELS 210.074 /274 with CODE (475) Tire pressure indicator

MODELS 211 with CODE (475) Tire pressure indicator MODELS 215 with CODE (475) Tire pressure indicator MODELS 220 with CODE (475) Tire pressure indicator MODELS 230 with CODE (475) Tire pressure indicator MODELS 240 with CODE (475) Tire pressure indicator

Union nut

Spacer ring (2x45°) 2

3 Valve body

4 Pin 4 2 mm

5 Screw

Date of manufacture

Identcode b


A69/1 Left front TPM [RDK] wheel sensor

Right front TPM [RDK] wheel A69/2


sensor

A69/3 Left rear TPM [RDK] wheel sensor Right rear TPM [RDK] wheel sensor A69/4

A69/5 Spare wheel TPM wheel sensor

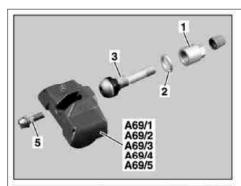



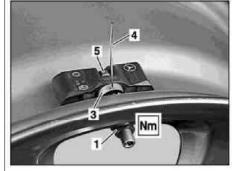



P40.15-2077-06

X	Remove		
1	Detach tires		AR40.10-P-1030A
2	Unscrew union nut (1) and remove spacer ring (2B 45 °)	installation tool for tire pressure monitor or pin 2 mm (4) in drill hole (arrow).	*WH58.30-Z-1040-06A
3	Remove TPM wheel sensor	Left front tire pressure monitor wheel sensor (A69/1), right front tire pressure monitor wheel sensor (A69/2), left rear tire pressure monitor wheel sensor (A69/3), right rear tire pressure monitor wheel sensor (A69/4)	
4	Unscrew bolt (5) and remove valve body (3).		
4	Check		
5	Carry out visual inspection	i Do not remove the white filter surface on the underside of the TPM wheel sensor. Do not clean TPM wheel sensor with compressed air, solvents, or detergents. Wipe off dirt with a clean, lint-free cloth only. i Install new TPM wheel sensor if:  D The white filter surface of the TPM wheel sensor is damaged or dirty  D Tire sealant was used  D Damage can be seen  D The TPM wheel sensor is more than 5 years old according to the date of manufacture (a).	
X	Install		
()	Replace all valve parts.	i Observe different valve versions.	
6	Insert bolt (5) through the hole in the TPM wheel sensor and screw on valve body (3) approx. 3 turns.	i When replacing the TPM wheel sensor, pay attention to the correct transmission frequency (433 MHZ or 315 MHZ).	
7	Insert valve body (3) with TPM wheel sensor into wheel rim so that the radial bore (arrow) for countering points upwards.		

8	Install spacer ring (2) and screw on union nut		
	(1) as far as the stop.	installation tool for tire pressure monitor or pin 4 2 mm (4) in drill hole (arrow).	
		Installation tool for tire pressure monitor	*WH58.30-Z-1040-06A
9	Tighten union nut (1).	i Secure valve body (2) using installation tool for tire pressure monitor or pin 4 2 mm (4), to prevent it from turning  After tightening, pull installation tool for tire pressure monitor or pin 4 2 mm (4) out of valve body (3). Danger of damage to tire.  Union nut to valve body  Installation tool for tire pressure monitor	*BA40.15-P-1001-01A *WH58.30-Z-1040-06A
40	Description of concernments into door		*BA40.15-P-1002-01A
10	Press RPM wheel sensor gently into drop center of rim and tighten bolt (5).	Internal torx bolt, wheel sensor to valve body	BA40.10-1 -1002-01A
11	Note ID code (b) of new TPM wheel sensor.	i It is advisable to record the code in the owner's manual or maintenance booklet.	
	Initialization		
12	Teach in new TPM wheel sensor in TPM control unit using STAR DIAGNOSIS.	Diagnosis system STAR DIAGNOSIS	*WE58.40-Z-1013-06A
13	Activate the tire pressure monitoring system	Model 211	AR54.30-P-1000-02RAT
		Model 230	AR54.30-P-1000-02RAR
		Model 240	AR54.30-P-1000-02RAH
n	Tire pressure monitor (TPM), activation	Model 210	GF40.15-P-0001-02A
	. , ,	Model 215, 220 up to 30.9.00	GF40.15-P-0001-02B
		Model 215, 220 as of 01.10.00 up to 31.05.01	GF40.15-P-0001-02C
		Models 215, 220 as of 01.06.01 up to 31.08.02	GF40.15-P-0001-02D
		Model 215, 220 as of 01.09.02	GF40.15-P-0001-02E

## Nm Tire pressure monitoring

Number	Designation	Model 210, 211, 215, 220, 230, 240
BA40.15-P-1001-01A	Union nut to valve body Nm	4
BA40.15-P-1002-01A	Bolt, wheel sensor to valve body Nm	4

## Commercially available tools (see Workshop Equipment Manual)

Number	Designation	Make (e. g.)	Order number
WH58.30-Z-1040-06A	Installation tool for tire pressure control	Alligator Ventilfabrik	232540
		GmbH	
		Postfach 1120	
		D-89526 Giengen	

## Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	STAR DIAGNOSIS Compact diagnosis system for passenger cars, order number 6511 1801 00
--------------------	---