


MODEL 163

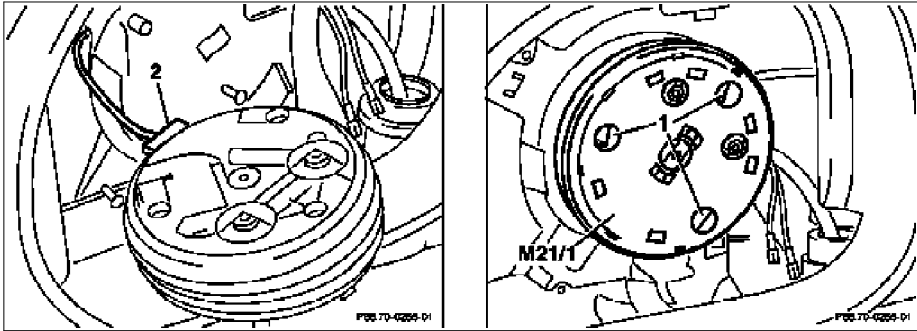

 
- 1Screw
- 2Connector
- M21/1 Left electrically adjustable and heated exterior rearview mirror
- M21/2 Right electrically adjustable and heated exterior rearview mirror (not illustrated)



P88.70-0256-04

Operation no. of operation texts or of standard texts and flat rates

| Division | Operation no. | Operation text |
|----------|---------------|--|
| P | 883476 | REPLACING MOTOR FOR LEFT ELECTRICALLY ADJUSTABLE EXTERIOR REARVIEW MIRROR |
| P | 883478 | REPLACING MOTOR FOR RIGHT ELECTRICALLY ADJUSTABLE EXTERIOR REARVIEW MIRROR |

|   | Removal, installation | | |
|--|--|--|------------------|
| 1 | Remove covering on outside rearview mirror |  Remove mirror housing covering only. | AR88.70-P-9040GH |
| 2 | Unscrew screw (1) | | |
| 3 | Disconnect connector (2) and remove mirror adjustment motor (M21/1 or M21/2) | | |
| 4 | Install in opposite order | | |